

# K-Series

## FLUSH MOUNT STAINLESS STEEL HOUSING KIT

### KA-FSH

for Color Video Door Stations


### - INSTRUCTIONS -

The KA-FSH is a flush mount stainless steel mounting box for KB-DAR and KC-DAR color video door stations.

#### MOUNTING

(See illustration below)

1. Pull out and down on screw cover at the bottom of K(B,C)-DAR.
2. Loosen tamperproof screw with hexagonal wrench.
3. Separate door station from back mounting bracket.
4. On bottom of unit, press two tabs with a screwdriver to unlock front cover panel.
5. Loosen tamperproof screw further, and remove it and the entire front panel.  
(See "REMOVE FRONT COVER PANEL" at the bottom of this page for further clarification.)
6. Place the camera unit between the KA-FSH front panel and the back frame.
7. Secure the back frame to the front panel with provided nuts.
8. Cut an opening in the wall that is 7-5/16" high x 5-1/32" wide.  
(Ensure that a mounting depth of at least 2-5/8" is available.)
9. Pass cable through knockout holes.
10. Secure mounting box to wall so that front of box is flush with the outside edge of the wall.
11. Connect wires to the video door station (See individual product wiring diagrams.)
13. Align the weather hood and the front panel, and attach to the mounting box using the supplied screws and tamper proof tool.

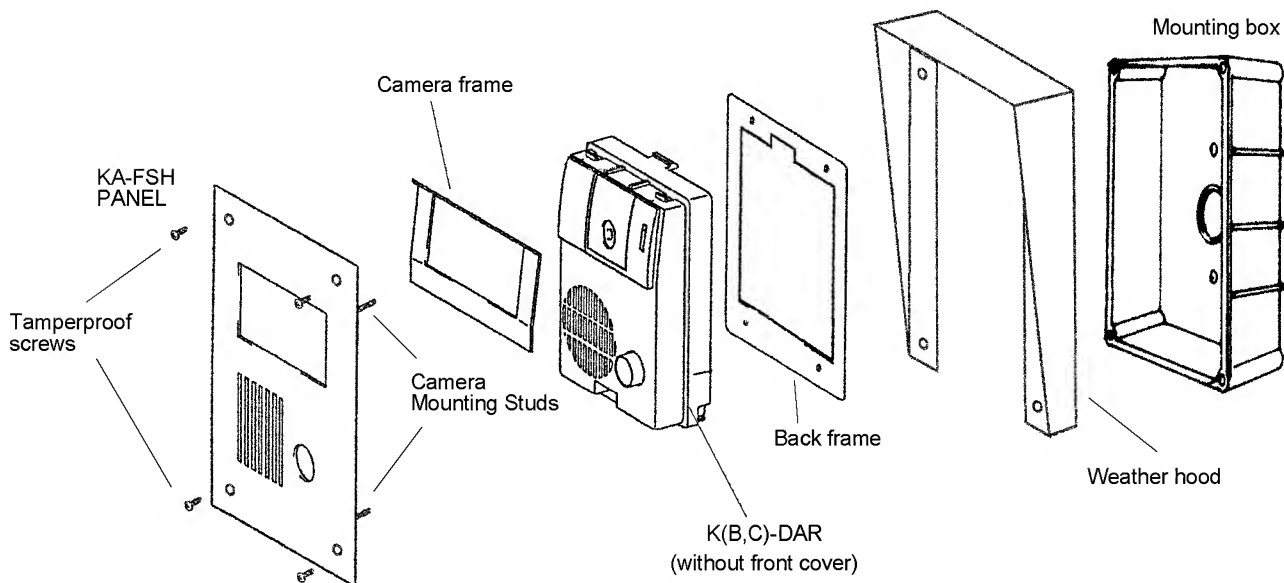

#### REMOVE FRONT COVER PANEL(\*)

(\*) Entire gray front panel must be removed.

1. Loosen tamperproof screw with supplied wrench.
2. Press tabs on the bottom of the K(B,C)-DAR with screwdriver to unlock gray front panel.
3. Loosen the tamperproof screw further until it can be removed.
4. Remove and discard the gray front panel and the tamperproof screw of the K(B,C)-DAR.

